

ROUTER SETUP GUIDE

1. Connect a cat5 cable between one of the LAN ports of the Linksys router and the network card on the computer
2. In a web browser, surf to **http://192.168.1.1**
3. The default login for Linksys:
 1. username: admin
 2. password: admin
4. Click on Administration along the top menu bar
 1. Change the Router Password to "propel" without quotes
 2. Change Remote Administration to Enabled
 3. Make sure the Administration Port is 8080
 4. Make sure Remote Upgrade is disabled
 5. Make sure UPnP is disabled
5. Click on Save Settings
 1. You may now have to re-log into the Linksys with the new password
6. Click on Setup along the top menu bar
 1. Change the MTU to Enabled with a size of 1492
 2. Change the Local IP Address to: 172.16.1.1
 3. Make sure the Subnet Mask: 255.255.255.0
 4. Change the Local DHCP Server to Enabled and leave the default settings
7. Click on Save Settings
 1. The page won't reload after the settings have been changed due to the IP address change.
8. In your web browser, surf to **http://172.16.1.1** and relog into the Linksys.
9. If you log back in successfully, the Linksys is setup correctly and can now be used in conjunction with a server to connect to the Internet.